



Ansatter og overganger

Bend - plugger - T - pustenippler - pakninger



DIM	GJENGER	FIRKANTBEND	FIRKANTBEND	FIRKANTBEND	ALBUE	ALBUE	SKOTT GJENOM- GANG
		han/han	han/hun	hun/hun	Han/hun	hun/hun	gjennomgang
1/4 - 1/4	BSP	HD 1815-04-04	HD 1821-04-04		HC 488-04-04	HD 2123-04-04	HD 1113-04-04
3/8 - 3/8	BSP	HD 1815-06-06	HD 1821-06-06	HD 2122	HC 488-06-06	HD 2123-06-06	HD 1113-06-06
1/2 - 1/2	BSP	HD 1815-08-08	HD 1821-08-08	HD 2123	HC 488-08-08	HD 2123-08-08	HD 1113-08-08
5/8 5/8	BSP		HD 1821-10-10				
3/4 - 3/4	BSP	HD 1815-12-12	HD 1821-12-12		HC 488-12-12	HD 2123-12-12	HD 1113-12-12
1 - 1	BSP	HD 1815-16-16	HD 1821-16-16		HC 488-16-16	HD 2123-16-16	HD 1113-16-16



DIM	GJENGER	T-KUPLING	T-KUPLING	T-KUPLING	T-KUPLING	PLUGG	HETTE
		han, han, hun	hun	hun, hun, han	han		
1/4	BSP	HC 534-04-04	HF 121111-04	HC 535-04-04	HF 111111-04	HD 1100-04	HD 1640-04
3/8	BSP	HC 534-06-06	HF 121111-06	HC 535-06-06	HF 111111-06	HD 1100-06	HD 1640-06
1/2	BSP	HC 534-08-08	HF 121111-08	HC 535-08-08	HF 111111-08	HD 1100-08	HD 1640-08
5/8	BSP	÷	HF 121111-10	÷	÷	HD 1100-10	÷
3/4	BSP	÷	HF 121111-12	HC 535-12-12	HF 111111-12	HD 1100-12	HD 1640-12
1	BSP	÷	HF 121111-16	÷	÷	HD 1100-16	÷
1 1/4	BSP	÷	÷	÷	÷	HD 1100-20	÷
1 1/2	BSP	÷	÷	÷	÷	HD 1100-24	÷
1	BSP	÷	÷	÷	÷	HD 1100-32	÷
9/16	JIC		÷	÷	HH 20330606	HD 1600-09	÷

STÅLGUMMIPAKNINGER


BSP DIM	BEST.NR.	BILDE
1/8	HD 3601	
1/4	HD 3602	
3/8	HD 3603	
1/2	HD 3604	
5/8	HD 3605	
3/4	HD 3606	
1"	HD 3607	
1 1/4	HD 3608	
1 1/2	HD 3609	
2	HD 3610	

STÅLGUMMIPAKNINGER

MM	BEST.NR.	BILDE
M10	HD 5510	
M12	HD 5512	
M14	HD 5514	
M16	HD 5516	
M18	HD 5518	
M20	HD 5520	
M22	HD 5522	
M24	HD 5524	
M30	HD 5530	

PUSTENIPPEL

BSP	BEST.NR.	
1/4"	HD 2219	
3/8"	HD 2229	
1/2"	HD 2239	

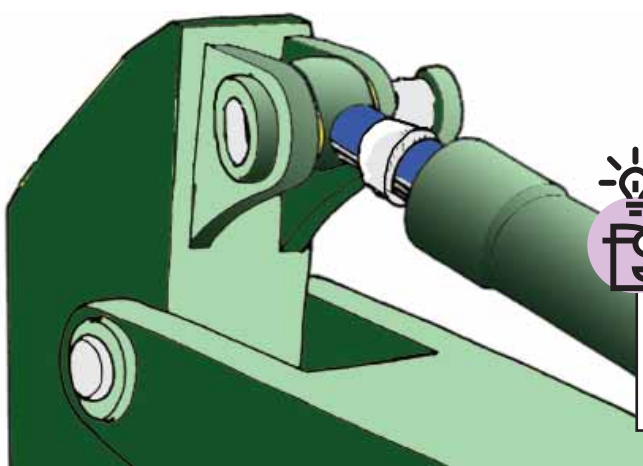

Tipsmannen sier

Pustenippel brukes bl.a. når dobbeltvirkende sylindere skal fungere som enkeltvirkende

